



outlines

# ASSEMBLY INSTRUCTION

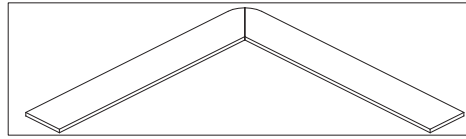

**MODEL:**


**OUT-INV6666CTA  
OUT-INV7272CTA**

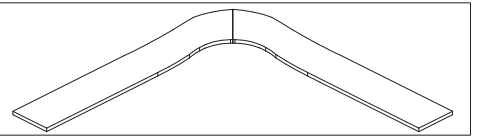

**MODEL:**

**OUT-INV7272SCTA  
OUT-PIN7272SCTA**

**FLAT BRACKET**



5 PCS

**19 CB SCREW**




28 PCS

**CAUTION:**


OFFICE FURNITURE IS HEAVY. ENSURE THAT YOU HAVE ADEQUATE ASSISTANCE WHEN LIFTING AND MOVING PARTS AND ASSEMBLIES. KEEP HARDWARE OUT OF REACH OF CHILDREN.

**NOTE: USE TWO PEOPLE TO AVOID DROPPING PARTS**


1

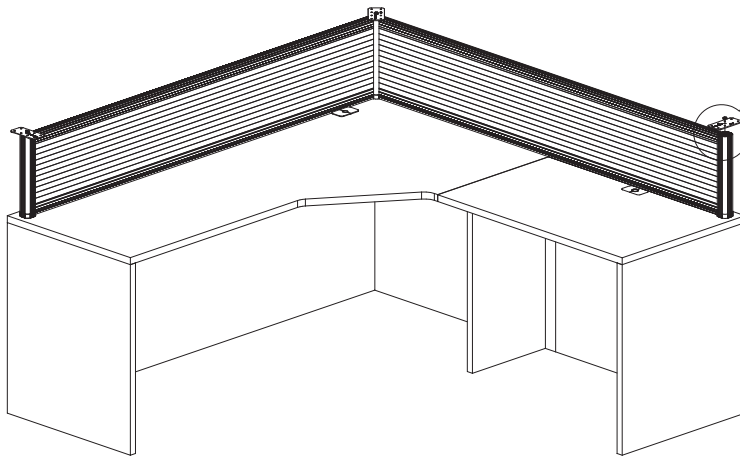

REMOVE WASHER

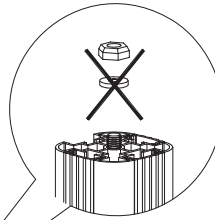

SECURE BRACKET WITH LOCK NUT

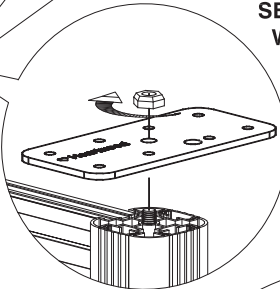

2

FASTEN TRANSACTION TOP BRACKET TO UNDERSIDE OF TRANSACTION TOP

